

# Installation

P/N: CL-R0026


## Spirit RS

Application for DDR, DDR2 Memory


### Parts List

Tem	Name	Photo	Q"ty	Tem	Name	Photo	Q"ty
A	Heatpipe Module		1	D	Thermal Pad (2 Types, thin and thick)		Thin: 2 Thick: 2
B	Aluminum Heatsink		2	E	Thermal Grease		1
C	Screw		4	F	Hexagon spanner		1

### Exploded View

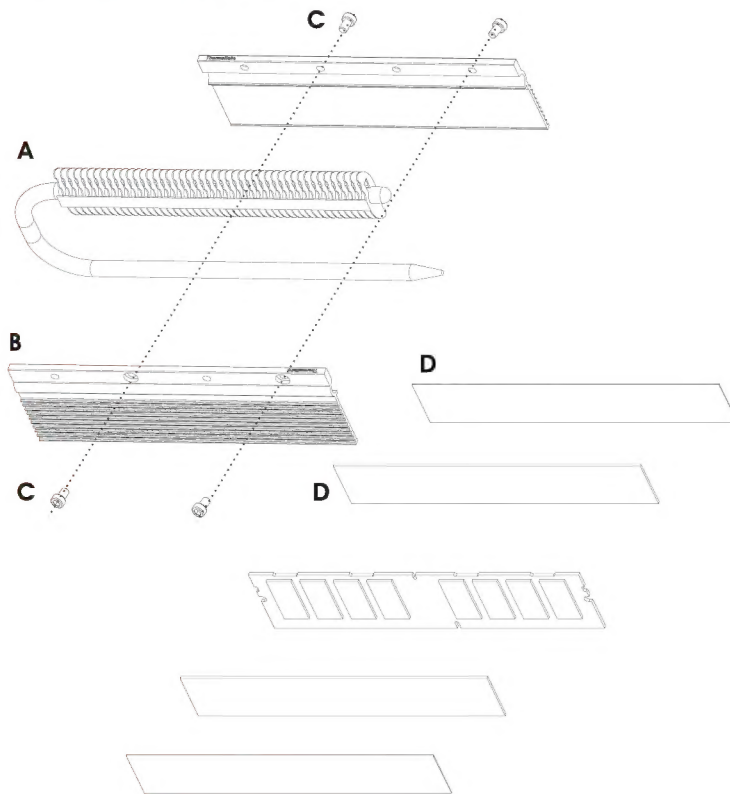


### Completed View

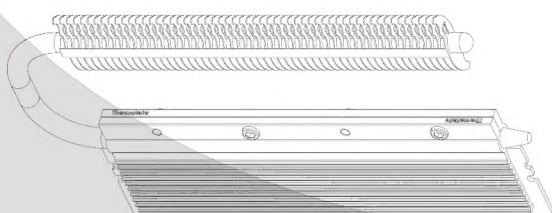


### Installation

- Loosen the screws (C) on each side of heatsink by using hexagon spanner (F) and separate the heatpipe module (A) and heatsink (B).

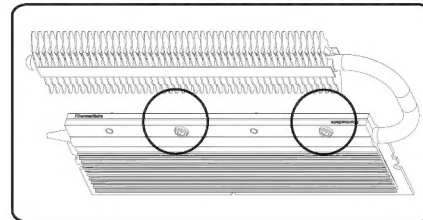

- Paste the thermal pad (D) onto each side of memory module.
  - For single sided memory module, please use thick thermal pad.
  - For double sided memory module, please use thin thermal pad.

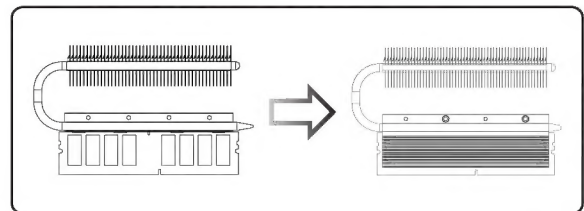

- Apply a thin layer of thermal grease (E) on the heatpipe, and secure the heatsink (B), heatpipe module (A) on to the RAM. (See Complete View)

**Note:** Angle for the Heatpipe module is adjustable, You may adjust it to the most suitable angle to avoid any possible interference.

**Tt Thermaltake**  
COOL ALL YOUR LIFE

www.thermaltake.com

REVISION A.2006.12

